

MASTERBOND

CONVERTIBLE WINDOW KIT

HOW TO USE

1

Remove loose old bonding sealer and then clean the repair area with the glass wipe.



2

Using the swab, apply body primer to the glass and rear of fabric roof.




3

Open the cartridge and apply to the repair area.



4

If you have bought suction clamps, attach these to hold the fabric roof in place whilst the bonding dries.

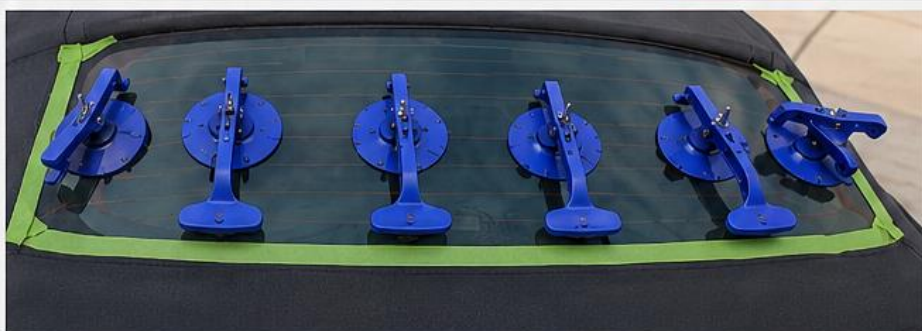

5

Let to cure for 24hrs.



For best results, use in a clean, dry environment.
Read full instructions before use.